

# Roku Stick Instructions

How to set up your Roku Stick:

1. Plug the Roku Stick into one of the HDMI port in the back of your TV.
2. Put the batteries in the back of the Roku remote.

On-Screen Setup:


1. You should see this image on your television screen.



2. Then this screen will appear... select your language choice.



3. There will be a button on the bottom of the Roku Remote... if your remote is not responding, press and hold that button down for 3 seconds. It should be working now.

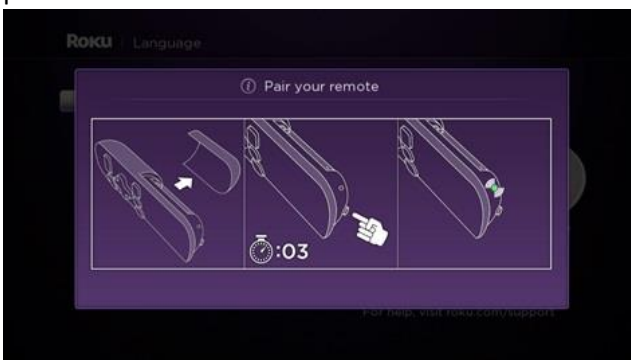

4. Repeat step 2 after your remote is paired.
5. This image will pop up on the screen, click "OK" on the remote.




6. Next, Connect your Roku to wifi.




7. Select your Wifi network, then enter your password.



8. After your wifi is selected and connected, it will look for the latest updates possible... Click "OK".

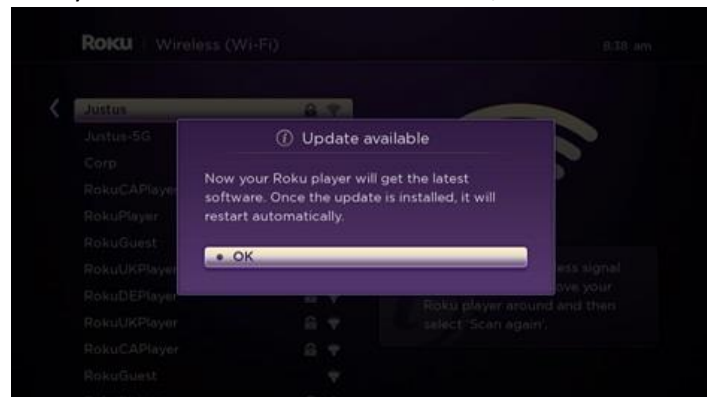

9. Software will update. This will appear on your screen:

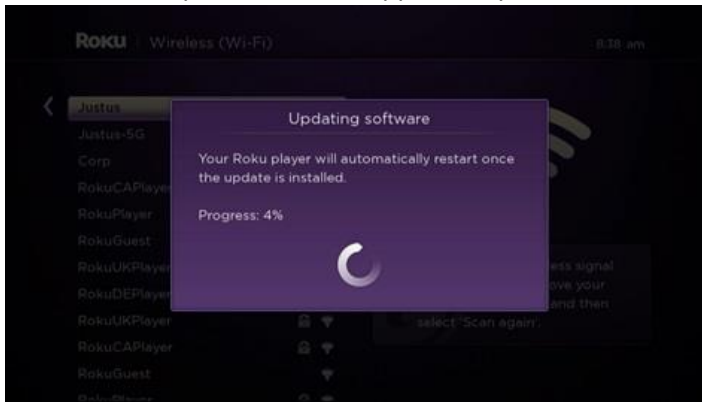

10. Now, Activate your Roku. This will appear on the screen... Go to [www.roku.com/link](http://www.roku.com/link) and use the code given to activate your roku.



#### Online Account Set-Up:

1. After going to [www.roku.com/link](http://www.roku.com/link) , enter the code that was given on the TV screen. (as shown in the image above).



2. You can either use an existing Roku account, or create a new one, its free and easy.

3. To create a new account just enter the basic information...

The screenshot shows the 'Create your Roku account' page, labeled 'STEP 1 OF 4'. It contains several input fields for personal information: First Name, Last Name, Email, Password, and Verify Password. There are also checkboxes for 'I am 18 years or older', 'I am not a resident of the United States', and 'I am not a resident of the United States'. A purple 'Next' button is at the bottom left, and a link for 'View our privacy policy' is at the bottom right.

4. Create a PIN.

The screenshot shows the 'Choose your PIN preferences' page, labeled 'STEP 2 OF 4'. It includes a 'PIN' input field and a 'Country' dropdown menu. Below these are three radio button options: 'I do not want to set up a PIN', 'I do not want to set up a PIN, but I want to use my Roku account to make purchases', and 'I do not want to set up a PIN, but I want to use my Roku account to make purchases and watch content'. A purple 'Next' button is at the bottom left, and a link for 'View our privacy policy' is at the bottom right.


5. Create a payment method.

The screenshot shows the 'Provide payment information' page, labeled 'STEP 3 OF 4'. It features a 'Payment Method' section with icons for Visa, Mastercard, American Express, and Discover. There are input fields for 'Card Number', 'Expiration Date', and 'Billing Address Information' (First Name, Last Name, Address 1, Address 2, City, State, and Zip). A 'Summary' section on the right lists 'Easy Single Entry' features: 'Send us your card information', 'Send us your card information', 'Send us your card information', and 'Send us your card information'. A purple 'Next' button is at the bottom left, and a link for 'View our privacy policy' is at the bottom right.

6. Explore and add some channels to your account to finish up.

The screenshot shows the 'Add some channels to your account' screen. It features the Roku logo at the top left. Below the heading, there is a paragraph: 'For your convenience, listed below are some of our most popular free and paid options. But remember, many more are also available in the Roku Channel Store.' The screen is divided into two main sections: 'Movies & TV' and 'Enhance Your Cable Subscription'. The 'Movies & TV' section includes icons for 'M GO' and 'CON TV', each with an 'Add Channel' button. The 'Enhance Your Cable Subscription' section includes icons for 'NAT GEO TV', 'SHOW ANYTIME', 'FOX NOW', and 'DC ORIGINAL', each with an 'Add Channel' button. On the right side, there is a 'Summary' section with a 'Total' amount and a 'Next' button.

7. You're all done! Your TV should show this image...

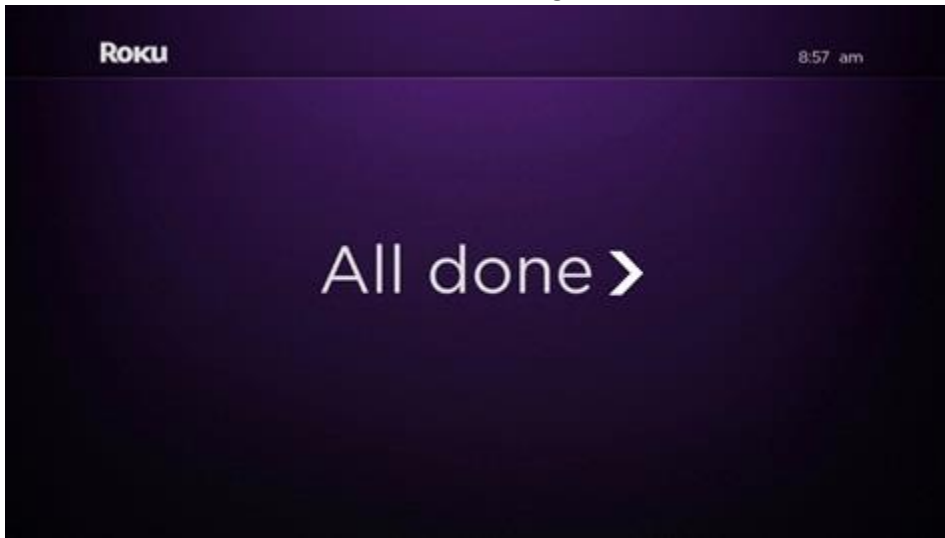

**ENJOY!**