


Parental Controls

Disable Parental Controls

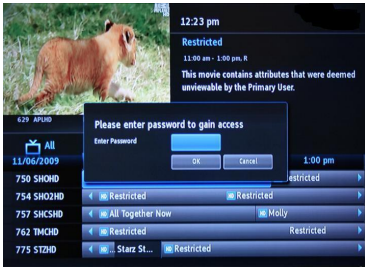

Press OK. Use the Number Pad to enter your parental controls password. Then highlight OK and press OK.

When you disable parental controls, they will remain that way until you turn them back on, or the Parental Controls timeout is reached. The timeout is the maximum period of time for which Parental Controls will be

disabled.

At the end of the time period, the system will automatically restore Parental Controls. You will see an alert on the screen just before parental controls are restored.

Enable Parental Controls



Press Menu and highlight Parental Controls, then press OK. Parental Controls are now in effect.

For more information on creating parental controls and parental control settings, see Settings on page 38.

Parental Controls

Introducing Parental Controls


Parental Controls lets you turn on and off all parental controls for your service. This allows you to let the kids watch TV without you constantly worrying that they may see something you feel is inappropriate, but still allow the adults to watch their programs without repeatedly entering a password.

Note: Parental Controls will not appear until you have created parental control settings. See the Settings Section to learn how to edit parental controls

Go To Parental Controls

Press **Menu** and highlight **Parental Controls**.

Check Parental Controls

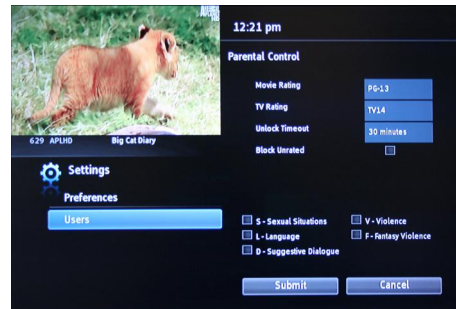

The Menu lets you know if parental controls are on or off.

If parental controls are in effect, the Parental Controls button will say On.

If parental controls have been turned off, the Parental Controls button will say Off.